

PARALLEL RUNS
MUST RUN THROUGH
THE PERPENDICULAR RUNS

PARALLEL RUN

PERPENDICULAR RUN

.410 CENTER HOLE
SQUARE WASHER

M8 X 35 PHILLIPS
FLAT HEAD BOLT

S-5 CLAMPS
(Attach on every other seam)

24"

LEDGER ANGLE

PARALLEL RUN


12-14 x 2-1/2"
SELF-DRILLING
FASTENER w/ WASHER

14 GAUGE
HAT CHANNEL

.260 CENTER HOLE
SQUARE WASHER

MAXIMUM SUPPORT PLATE
SPACING 5'0". LOCATE
OVER PURLINS USING S-5 BLOCKS

PERPENDICULAR RUN

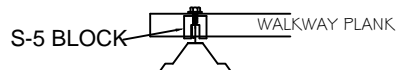

5/16" x 1-1/4" PHILLIPS FLAT HEAD BOLT
(PERPENDICULAR RUNS)

5/16" BOLT WITH WASHER HEAD
(PARALLEL RUNS)

12-14 x 1-1/4"
SELF-DRILLING FASTENER

12-14 x 3"
SELF-DRILLING FASTENER

S-5 CLAMP

.410 HOLE SQUARE WASHER

.260 HOLE SQUARE WASHER

30" WIDE LEDGER ANGLE

30" WIDE SUPPORT
PLATE FOR PERPENDICULAR RUN

30" WIDE SUPPORT
PLATE FOR PARALLEL RUN

WIDTH: 24"

ROOF WALK GAUGE: 18 GAUGE GALVANIZED

LENGTH PARALLEL:

LENGTH PERPENDICULAR:

INSTALLATION NOTES

- * ATTACH PLANKS ON SUPPORT PLATES USING 2- 1/2" SELF-DRILLING SCREWS AND 5/16" WASHER
- * GRATING SHOULD BE BUTTED END TO END OVER SUPPORTS AND SPLICE PLATES
- * PARALLEL RUNS MUST RUN THROUGH THE PERPENDICULAR RUNS
- * INSTALL S-5 BLOCKS ON SEAMS SET SCREW
- * CONSULT ROOF MANUFACTURER FOR SPECIFIC INSTRUCTIONS AND WARRANTY INFORMATION

CUSTOM CURB
1585 LOS ANGELES AVE
SATICOY, CA 93004
(805) 647-1200
jack@customcurbinc.com

JOB NAME:	ROOF PANEL:	MATERIAL: 18 GA GALVANIZED	
QUOTE #	ROOF PITCH:	QTY:	DATE: